

# *icon Audio*

## **PS1 All Valve Phono Pre Amplifier Instructions**



### **About the PS1**

#### **A “High-end” All Valve Phono Pre-Amp**

Thank you for purchasing one of our phono stages. amplifiers, a lot of care has gone into the design, component selection and production of this amplifier. We are sure that you will hear the difference.

Our amplifiers have a reputation for excellent performance and reliability following excellent reviews in the Hi Fi press.

It well know that for many reasons, valves can sound much better than transistors, this is especially so with vinyl reproduction. Chiefly because:

- The massive overload of valves prevents distortion on highly modulated or scratched & worn LPs therefore minimising noise.
- The “warm” sound of valves is particularly suited to the reproduction of music from vinyl.
- The 40db RIAA difference between 20hz and 20khz is easier for valves than transistors.
- Our “passive” design uses no “feedback”
- Our simple design uses “audiophile” components.
- We use “hard wired” “point to point” wiring with no printed circuit board.

There are several “valve phono pre-amps” that are only part valve or only use valves as an output stage; these will not have the colour and vibrancy of valves. The simplicity of the design means that we were able to avoid the use of printed circuit boards, which are

not ideal for valve amplifiers despite their common use.

Although good frequency response, low noise and distortion are important in any hi fi unit, there are several other criteria that are often forgotten. Transistors have a poor overload capability, and the resulting distortion is very unpleasant. The PS1 has a massive overload capability and even then would go into ‘soft clipping’, which is much more benign and easier on the ear.

The simplicity of the circuit means that there are much fewer components for the signal to pass through, fewer connections and switches, again adding to the purity of sound.

This simplicity also means that we can use higher quality oversized components, such as 2w resistors.

The use of popular valves, which are still in production, means that obtaining replacements is easy and inexpensive when necessary.

The final result is an amplifier with excellent characteristics, with an accurate yet smooth and transparent quality.

To get the best out of the PS1 Please read the enclosed notes. We have tried to give you all the basic information you will need. Should you be uncertain about anything contact your dealer, or ourselves.

## Final Inspection

*This amplifier has been carefully checked, tested and final adjustments made by Icon Audio in Leicester.*

*It has passed our rigorous listening test and final inspection to assure you of optimum performance and reliability.*

Date ...../...../.....

Model .....

Amp Serial Number .....

Customer .....

Check amplifier finish .....

Run 6 hour test .....

Check inputs

Moving Coil TXs fitted Y/N

Sound Quality .....

Channel Balance .....

Valve Microphony .....

Valve Seating .....

Hum level left/right .....

RF Test .....

Serial No sticker and recorded .....

Mains voltage 110 / 240V

IEC Mains Fuse .....A

Sales invoice .....

Credit card receipt .....

Customer survey form .....

### **Upgrades:**

Driver valves .....

Mains lead .....

Interconnects .....

Signed off by .....

Notes:

Please note we do not test the standard mains lead.

# SET UP GUIDE

**1 Unpack unit carefully.** Make sure that it is in good condition. It is important that you keep packaging for warranty/service return.

**2 Check that the valves are fitted properly.** The valves will normally come fitted, so a visual check that they are upright is normally all that is necessary. If not see the section on "changing valves".

**3, Connect the power lead** between the power supply unit and the pre-amp. **Please note the power lead is permanently connected at the power supply unit. Do not attempt to remove it.**

**4, Connect to turntable and amplifier.**

Making sure that you connect the "earth" leads from the turntable to the post on the rear.

**5 Connect the power supply unit,** And site it away from the preamp. Connect to the mains using the supplied IEC mains lead. If for some reason the welded plug must be removed, please remove fuse and dispose of immediately. (As they can be a danger to children if plugged in). The replacement plug should be wired in the following way Brown to Live terminal, Blue to Neutral terminal and Green/Yellow to Earth terminal.

**6 SWITCH ON!** The blue mains indicator should light up and unit will start working after about 15 seconds. All valves should have a visible orange glow from the cathode heaters. Full quality will be reached in 5 minutes.

**7, MM or MC?**

If your PS1 is fitted with the optional step-up transformers (designated by PS1 MC on the rear) you can select between the two types on the front. Otherwise the selector should be left in the "MM" position. High output MC pickups may be used without the MC step-up transformers. Or you may choose to use an external step-up device. It may be returned to us in the future for this upgrade.

**8, Volume**

The PS1 has a high output (1.6v) and is capable of driving most power amps directly. However the output may prove to high for most integrated or pre-amps, therefore back off the volume control of the PS1 to get a similar level to CD or radio. This will help with the noise level. Normal position is about "two o'clock".

## Getting the best from your PS1

### Hum problems

Like any phono stage the PS1 will pick up hum from other hi fi and electrical units. This can be minimised by taking care to site both the pre-amp and power supply away from both each other and other equipment.

On the rear of the PS1 is an "earth" or "ground" switch. This will minimise any hum that is due to an "earth loop" (to many earths). If on initial setting up you are aware of loud hum, try this switch first, and leave in the position that gives the minimum hum. If you do not notice any difference, leave in the "Earth position. Bear in mind that subsequent alterations to your system may make it necessary to change this setting.

As a rough guide, when set up correctly the hum should be at about the same level as the background noise as you advance the volume on your amp. You dealer or Icon can advise you.

The PS1 is not particularly sensitive to hum in Moving Magnet mode, but this will depend upon the hum field of associated equipment such as amplifiers etc.

Moving Coil requires 10x more gain and therefore is more sensitive to hum and noise from adjacent equipment, so it makes sense to spend a little time experimenting in order to find the best site for your PS1, arranging your turntable and cables for least interference. Keep the turntable signal lead away from power cables and other equipment.

Most problems associated with hi fi equipment involve connecting leads. Always make sure you have good connections and use good quality interconnects. Your dealer will advise you.

## General points

- Some mobile phone 'breakthrough' is normal
- Storage in damp conditions could damage transformers.
- Clean with a damp cloth, with power disconnected. Do not use solvents.
- Keep liquids away from the power supply and pre amp.
- Allow about 20 seconds after switching off before switching on again.
- Always switch off and allow about 5 mins discharge time before making any adjustments.
- Do not operate power supply without connecting to the preamp.

### Connecting Leads

Use good quality connecting leads, which are no longer than they need to be.

### Leaving the amp switched on

Transistor equipment needs to be left on for a long period to reach its optimum sound. With valves this takes minutes. Therefore there is no advantage in leaving the PS1 switched on when it is not in use. It is using electricity and valves have a finite life, (averaging about 5000 hours or 6000 LPs). Do not switch on and off unnecessarily. From new the PS1 will take about 30 hours before it is "burnt in".

## Trouble shooting

### Amplifier Dead

If the LEDs or valves do not light up, check the 1amp mains fuse at the back of the amplifier. To gain access, remove the mains lead. The fuse is in a small plastic drawer, which forms part of the socket assembly. To open insert a flat bade screwdriver or similar and prise open. **The fuse in use is the innermost** the outer is a spare. Should the replacement fuse also blow there is a fault. Replacements should be 1Amp 'anti-surge'.

The fuse in the mains plug should be a 3 amp fuse, although unlikely, this should be checked if the amplifier fuse is OK.

### No sound

Have you selected the right input? Are the connections OK? Is everything switched on? Are the speakers connected? Is MC selected on the MM only version?

### Valve Replacement

Valve life will depend upon such things as hours of use and number of on/off cycles. A valve may be considered to have come to the end of its life when the sound quality has changed or it has become noisy and microphonic. Ideally you should replace all three at the same time.

As the valves are crucial to maintaining the performance and quality, choose them with care.

Only remove the cover after disconnecting from the mains. This may be done by removing the screws from either side and prising apart the cover to enable removal.

**It is essential that only the correct valves are used as similar looking valves have a different pin connection and insertion could result in damage to the amplifier and risk of electric shock. If in any doubt consult your dealer or Icon.**

**Service:** Should you suspect a problem, you could return the unit to Icon Audio for a periodic service or return the valves for testing free of charge.

### Specifications and Features

#### Built in volume control

**Stereo/mono switch for better S/N and distortion from mono and worn stereo records**

- Choke regulated power supply
- Separate Power supply
- All hand wired point to point
- No printed circuit board to 'colour' sound
- Japanese Blue ALPS volume pot.
- All Triode valves

- 2x ECC83 1x ECC81
  - Sensitivity: 2.5mv for 1.6v (0.25mv MC)
  - Load: imp: 47k MM, 100 ohms MC
  - Custom wound MC transformers (option)
  - Signal to noise level -75db (MM unweighted)
  - RIAA Freq response 20hz-20khz +0 - 1db
  - NO feedback used
  - High quality close tolerance resistors
  - Blue LED mains indicator
  - Polypropylene audio capacitors
  - Silver TEFLON audio cable
  - DC supply for valve heaters
  - Stainless steel chassis
  - 6mm solid alloy front & rear plates
  - Gold plated Input terminals
  - 230/240volts 30watts 1.0A anti-surge fuse
  - C E certified
  - Pre-amp 88mmW, 310mmD, 134mmH , 3.9kg
  - PSU 165mmD, 82mmW 80mmH 2.8kg
- (Figures in brackets allow for rear connections)

(Specifications subject to change, errors & omissions excepted 25/11/10)

Designed and developed by David Shaw and Barrie Roberts in Leicester, each pre-amp is carefully checked & tweaked plus any custom modifications added as required before undergoing rigorous tests in all its important static & dynamic parameters. Finally each pre-amp is run to allow the valves to "bed in" to ensure you get the best performance.

***icon Audio***

351 Aylestone Road Leicester LE2 8TA

**Phone 07787 158791**

**www.iconaudio.co.uk** Fax 0116 244 0593

Email: [iconaudio@ntlworld.com](mailto:iconaudio@ntlworld.com)

Direct 25/11/2010

## **Important**

When unpacking and re-packing, please take care not to damage the stereo/mono switch on the front panel.

The switch stem may be broken if undue force is applied while easing the unit out of the foam packaging, or if you push your hand down the packaging adjacent to the front panel.